


RV9A N103LF	
IFR Electrical System	
T.C. Chang	Rev 2.0
	6/29/2008
Engine	

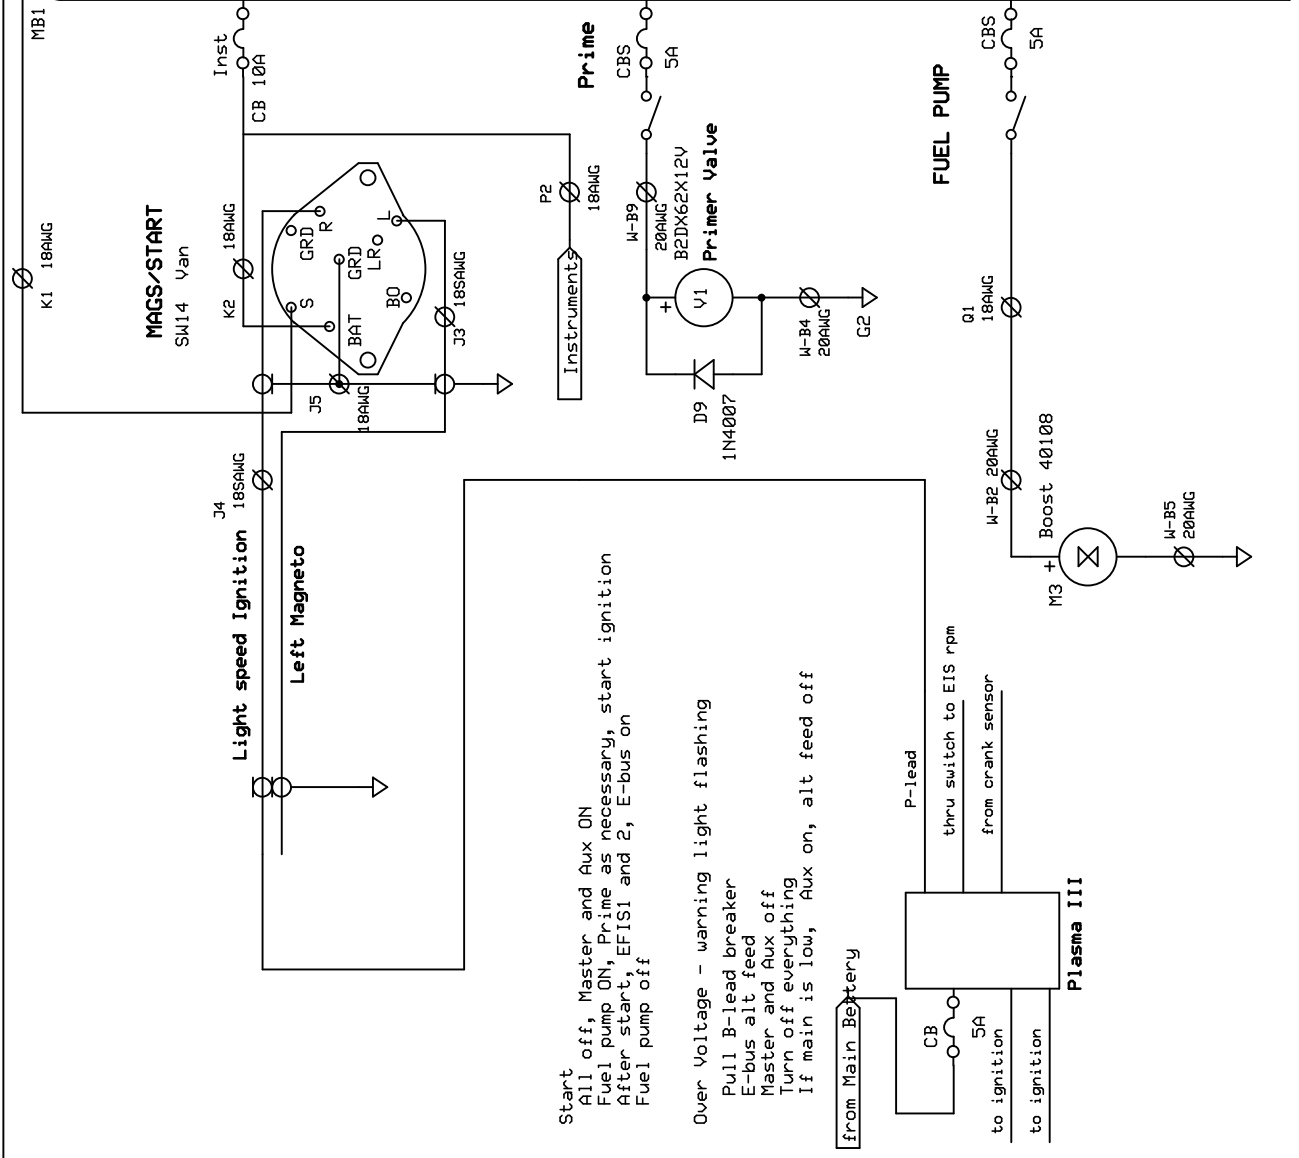

Start
 All off, Master and Aux ON
 Fuel pump ON, Prime as necessary, start ignition
 After start, EFIS1 and 2, E-bus on
 Fuel pump off

Over Voltage - warning light flashing
 Pull B-lead breaker
 E-bus alt feed
 Master and Aux off
 Turn off everything
 If main is low, Aux on, alt feed off

